
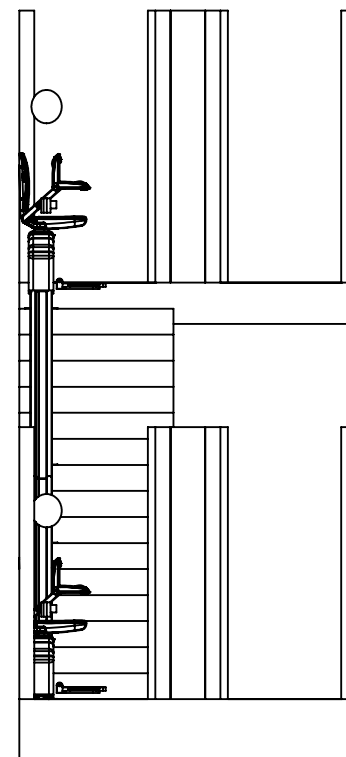


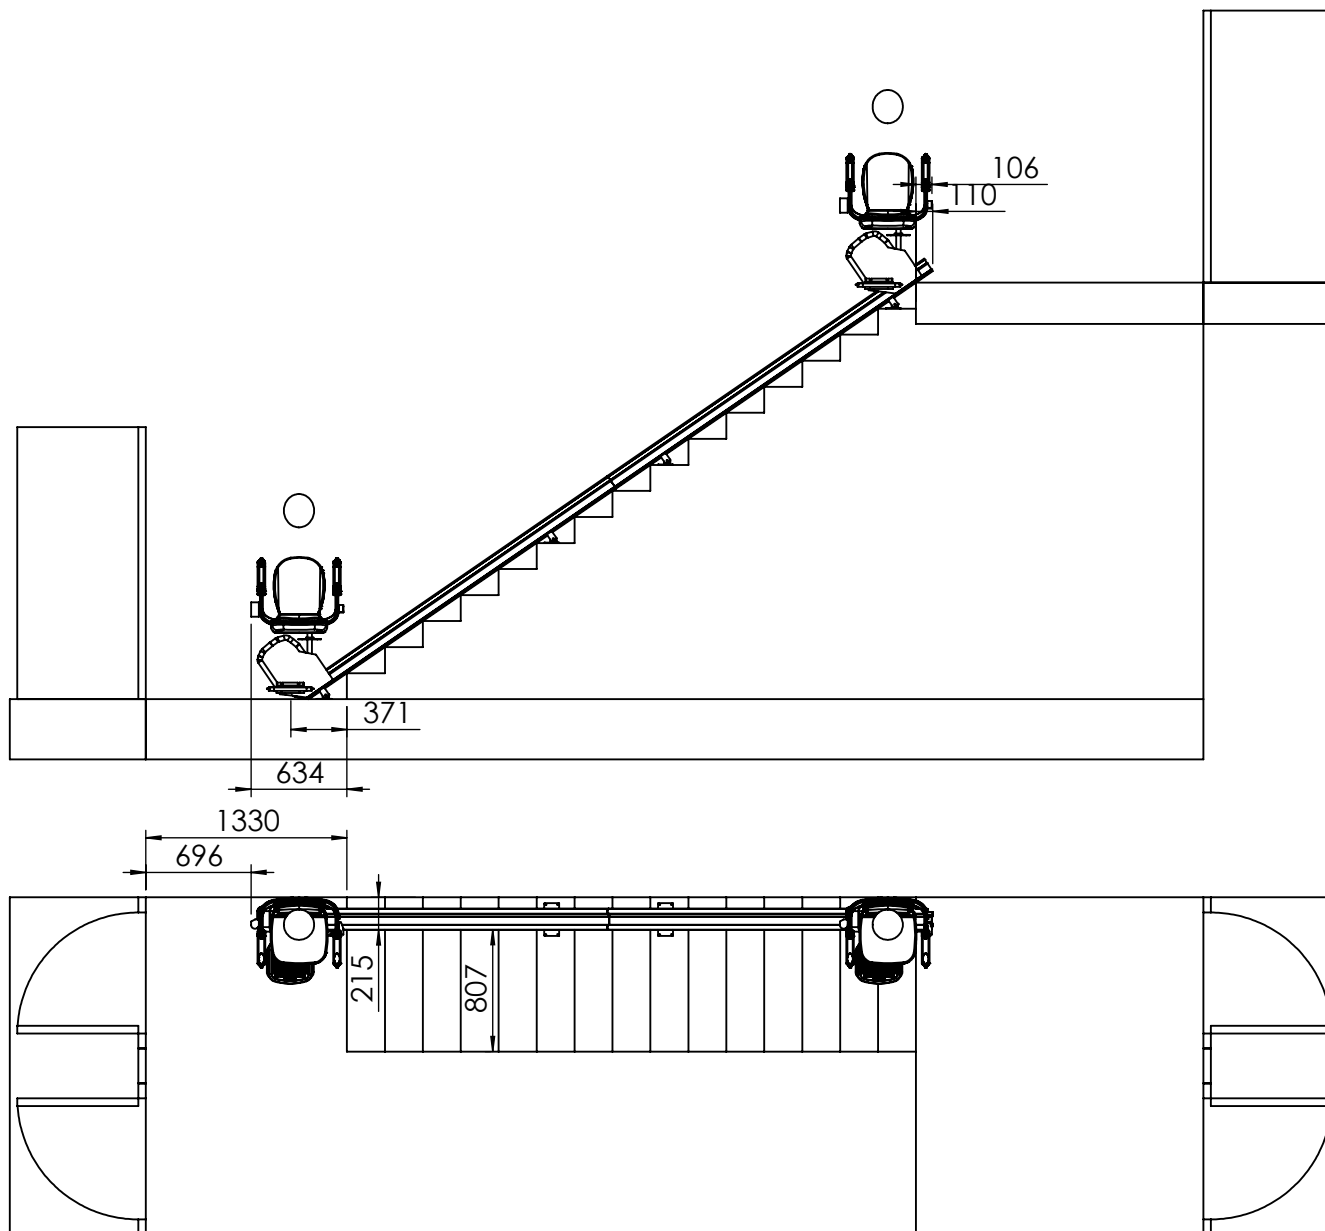


VERTITEC
REF.-Silla en uso

DWG. NO.

REV.

BORJA PEIRÓ SIGNES

SHEET 1 OF 2

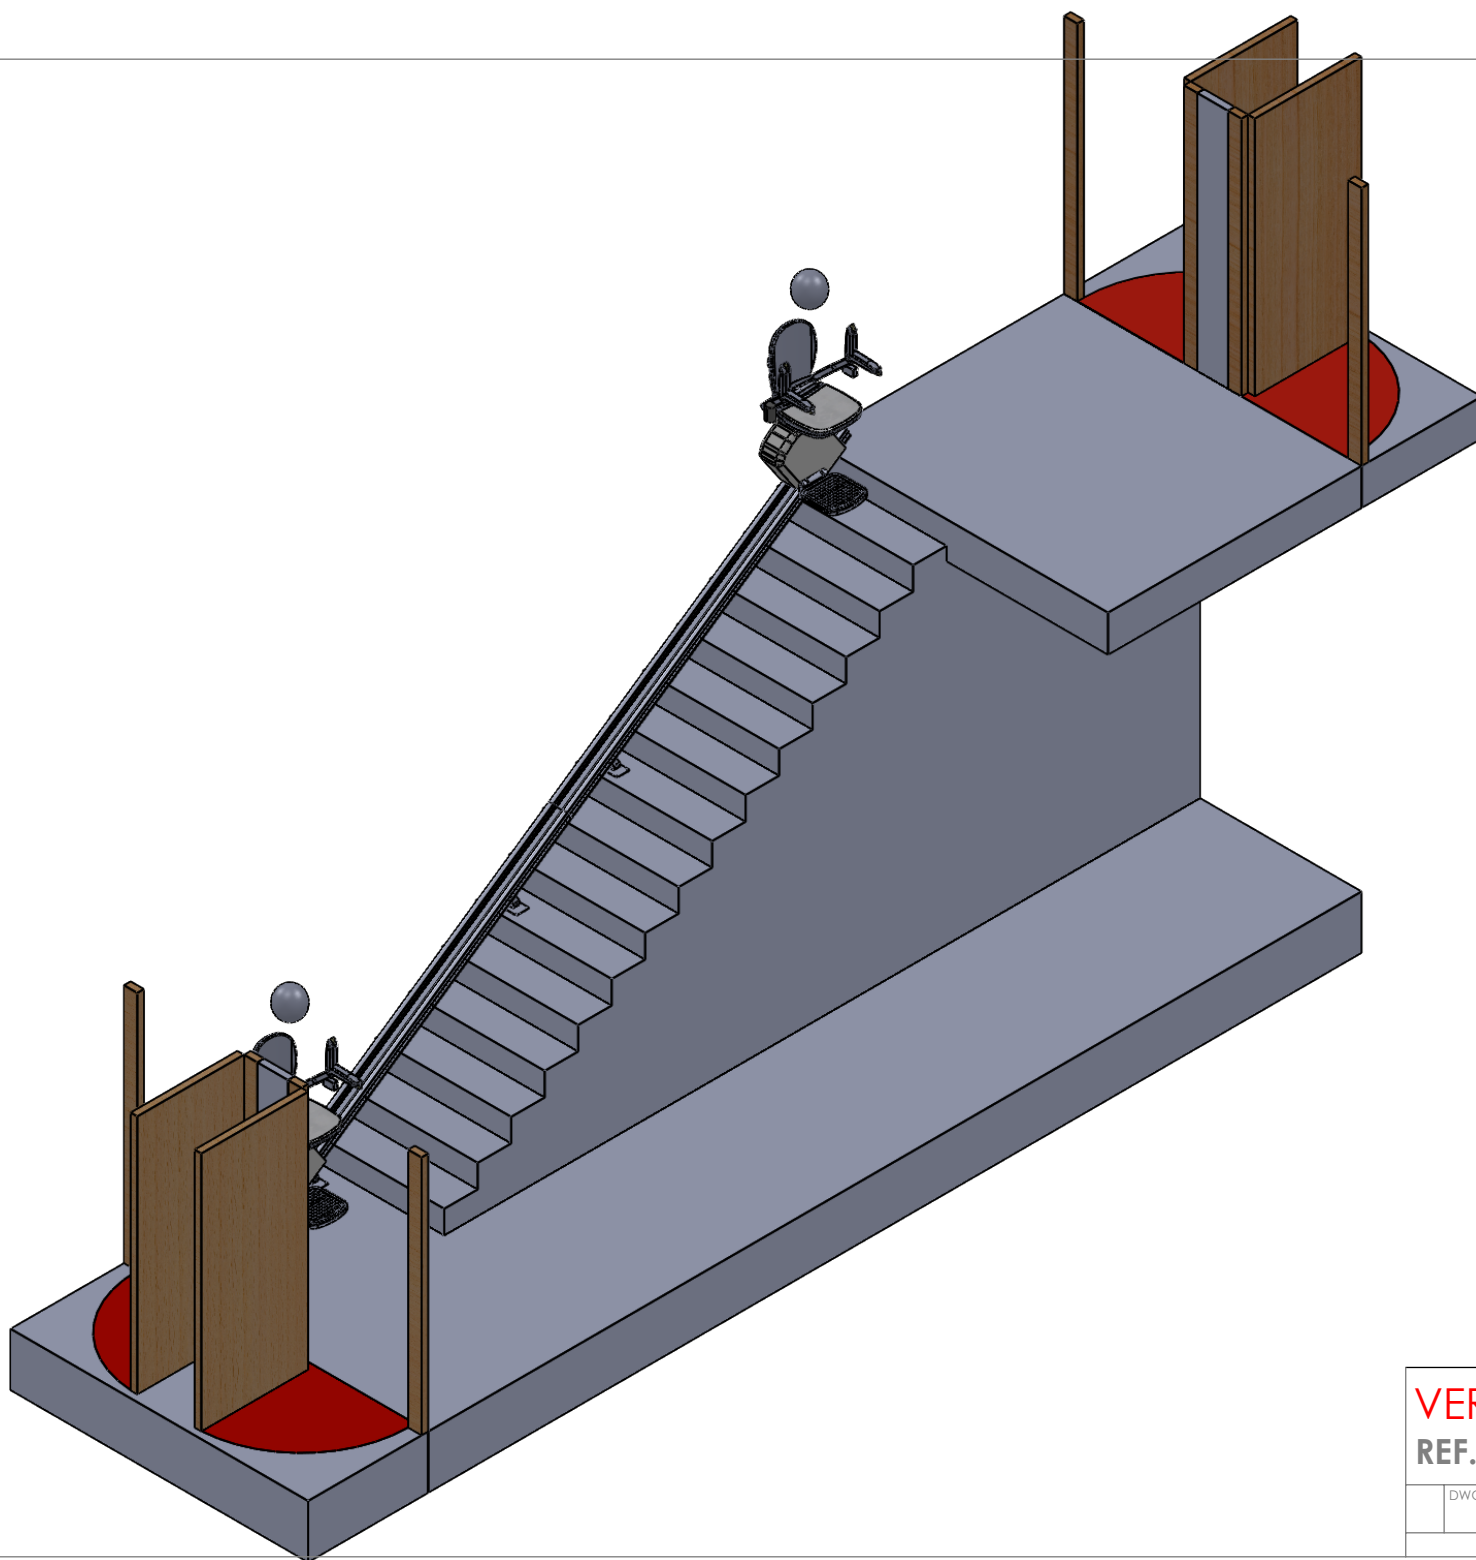



VERTITEC
REF.-En uso

DWG. NO.

REV.

BORJA PEIRÓ SIGNES

SHEET 2 OF 2

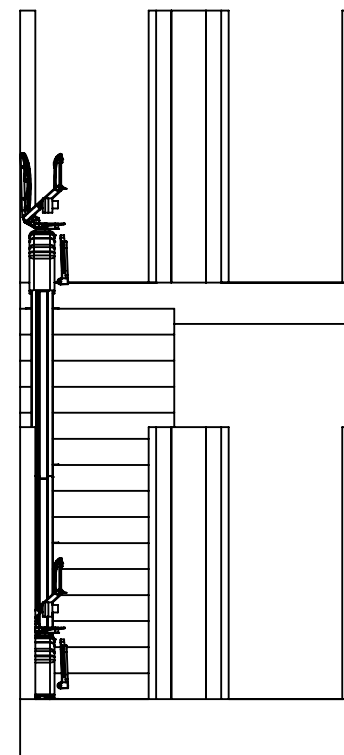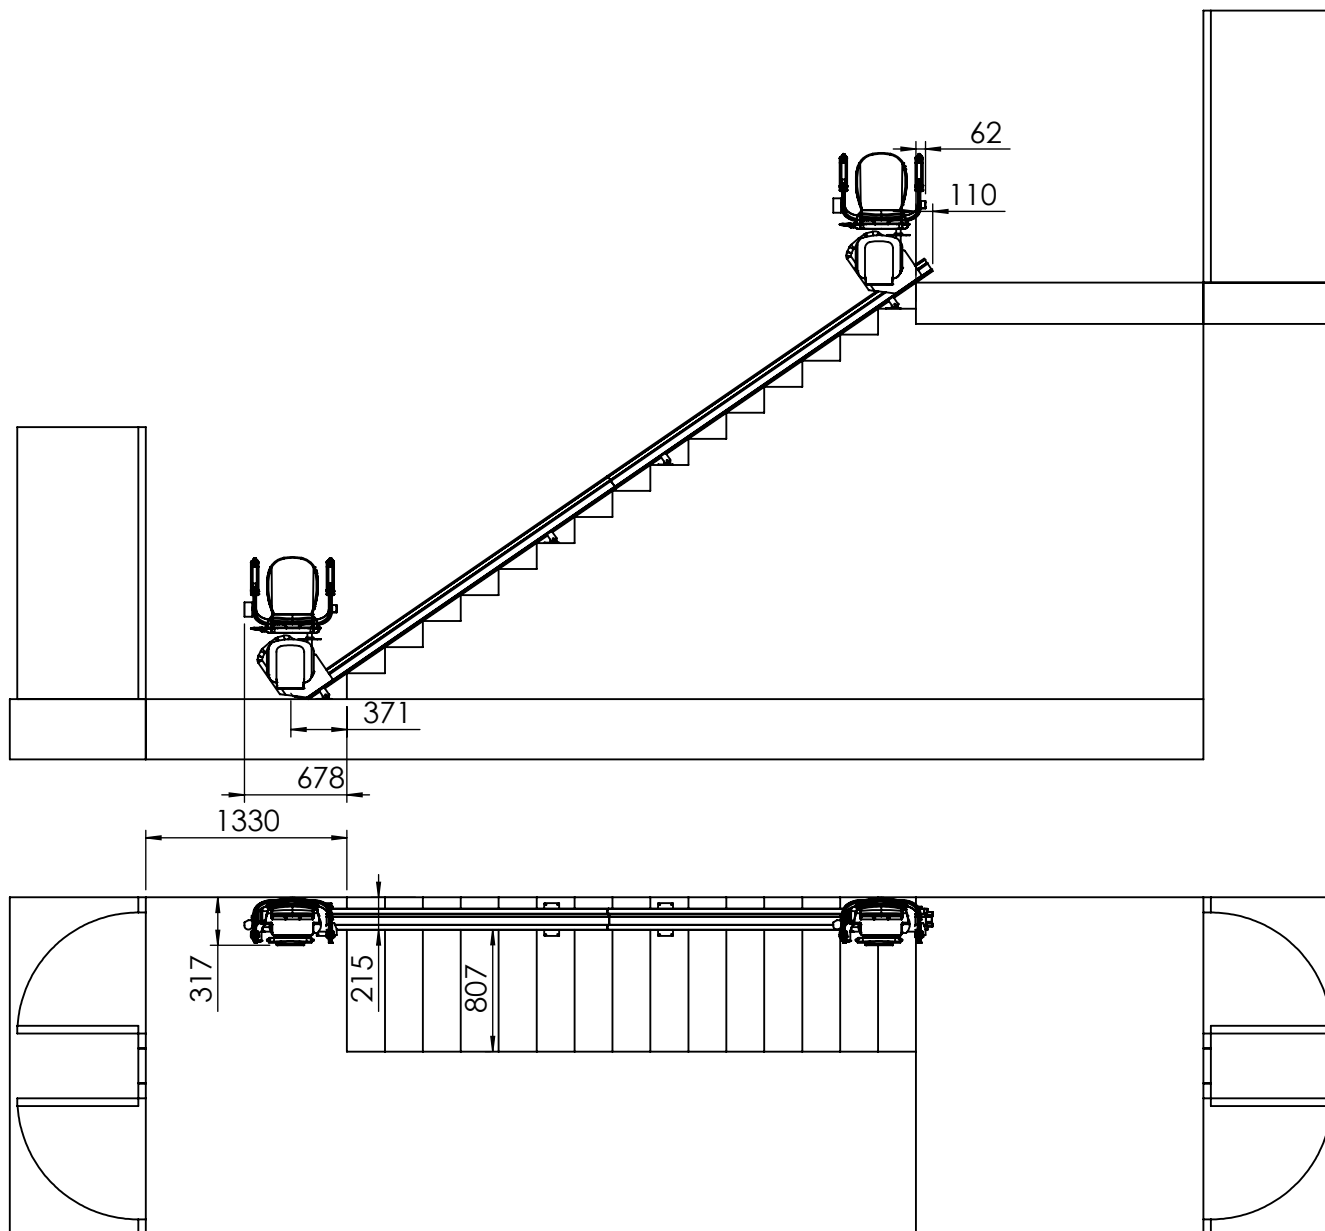


VERTITEC
REF.-Plegada

DWG. NO.

REV.

BORJA PEIRÓ SIGNÉS

SHEET 1 OF 2

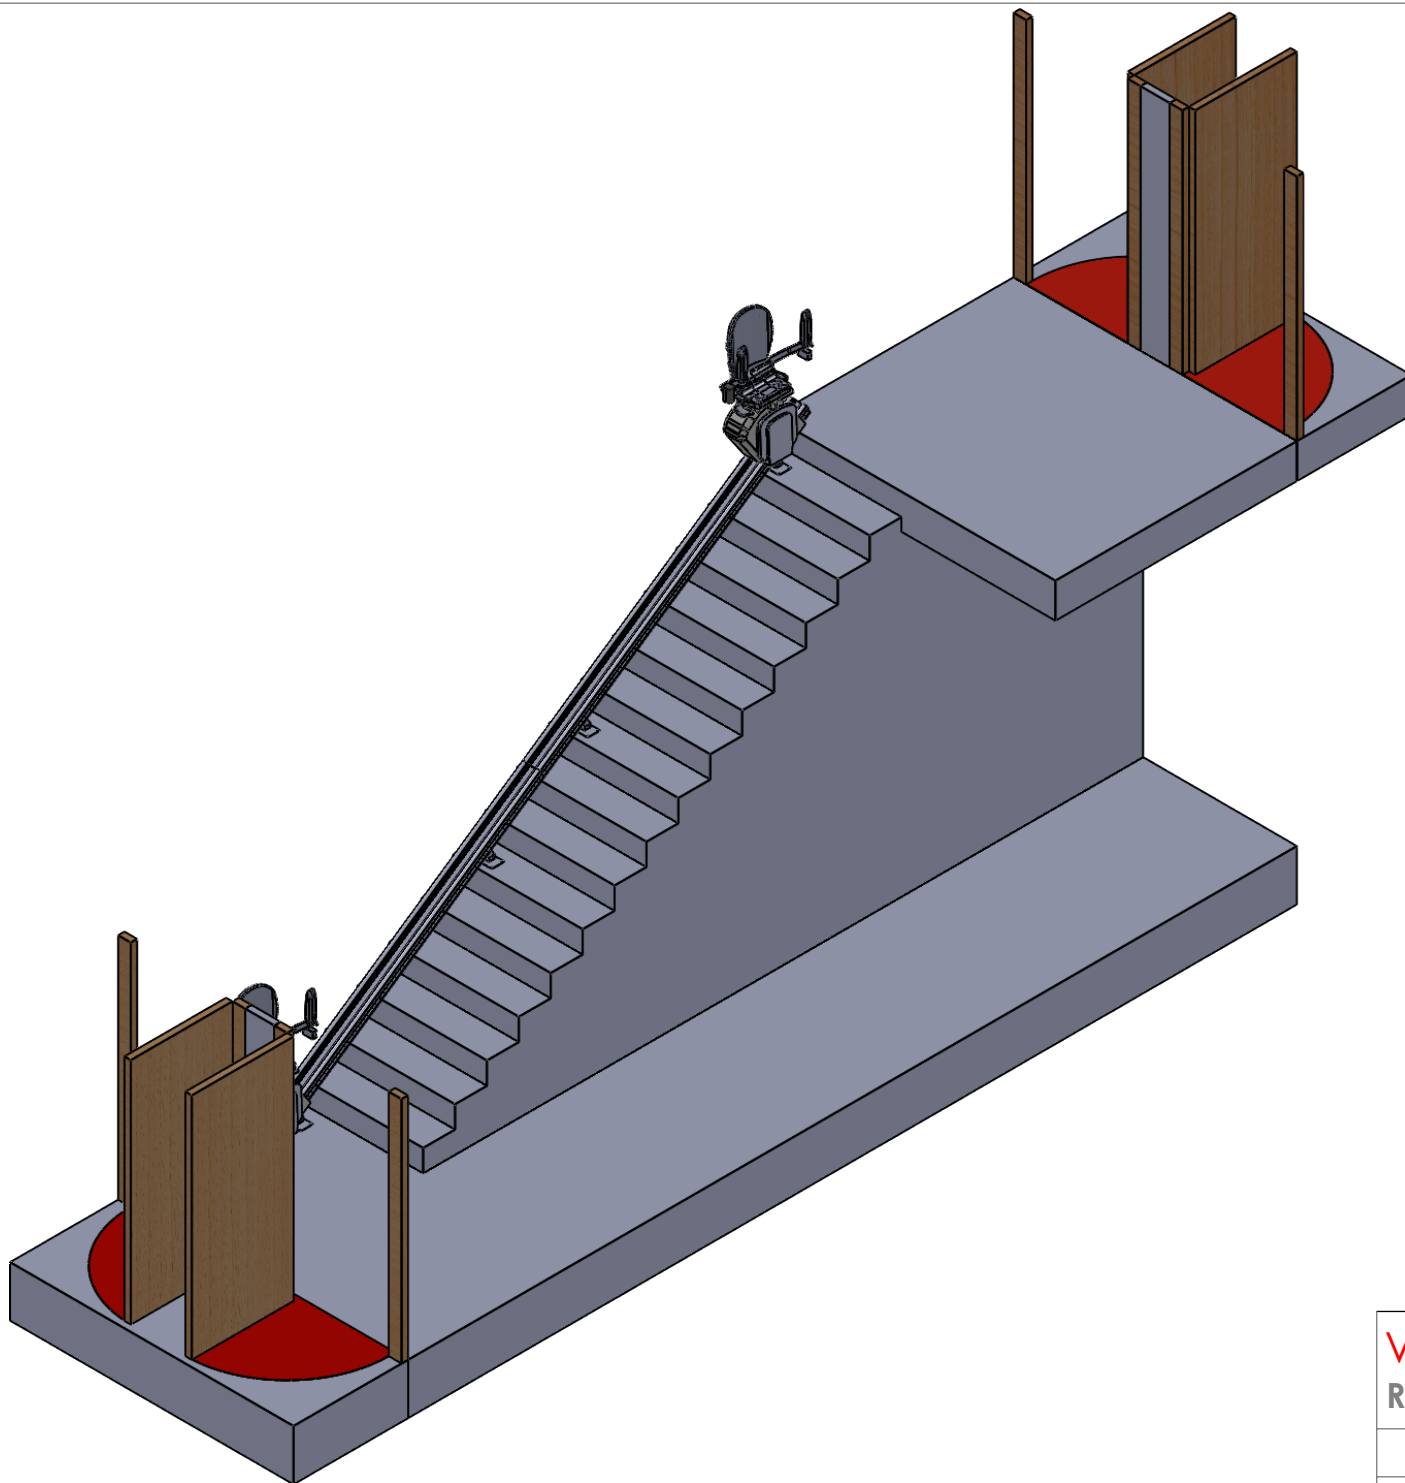





VERTITEC
REF.-Plegada

DWG. NO.

REV.

BORJA PEIRÓ SIGNÉS

SHEET 2 OF 2

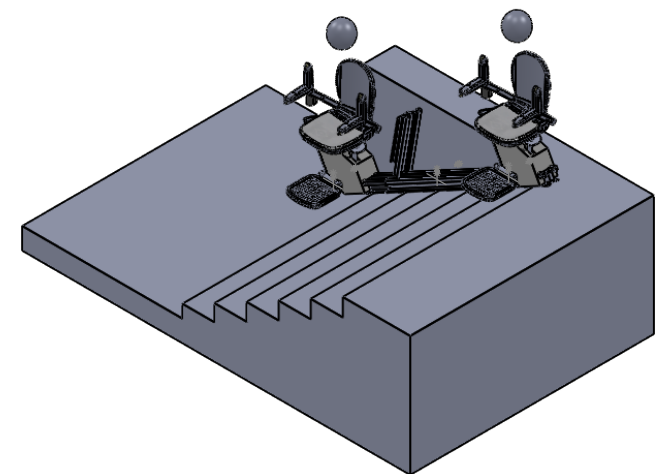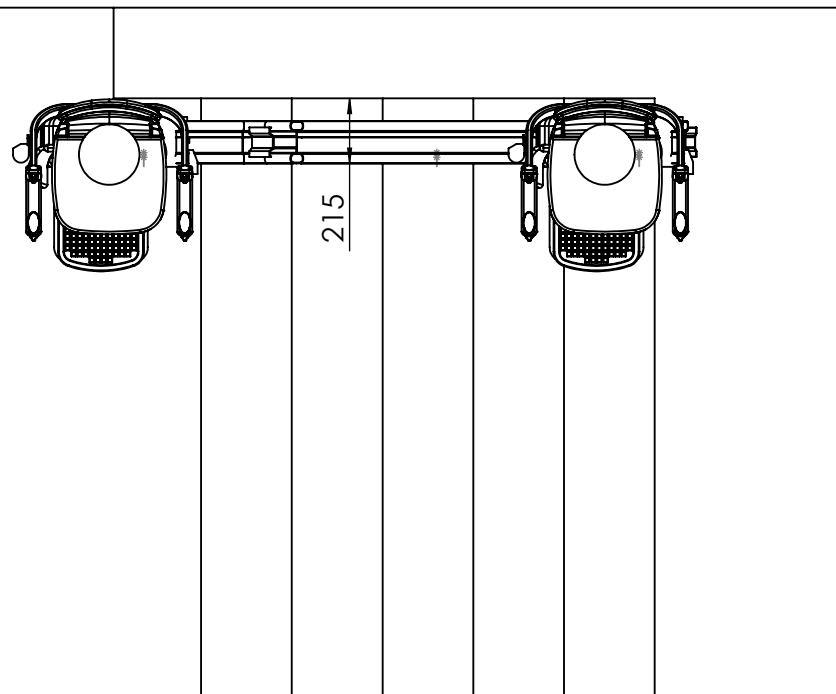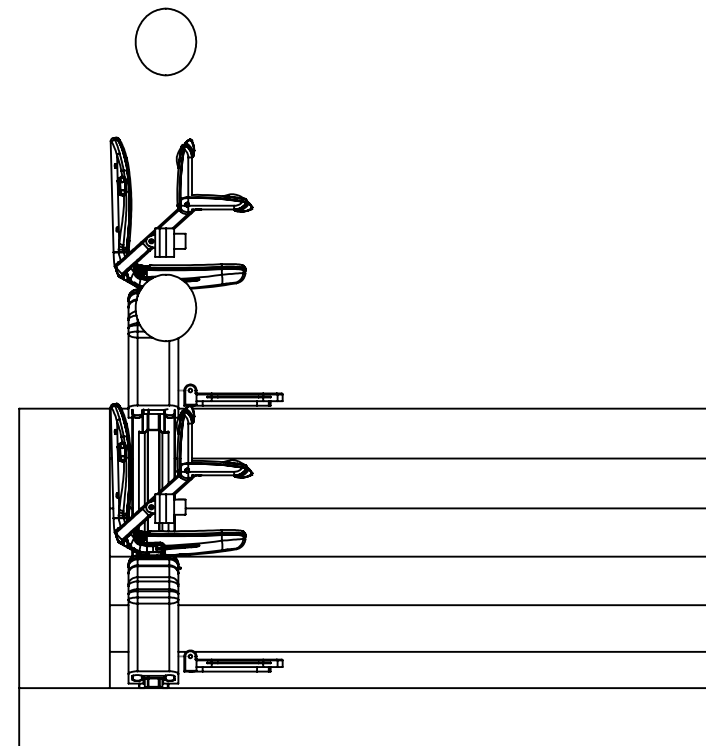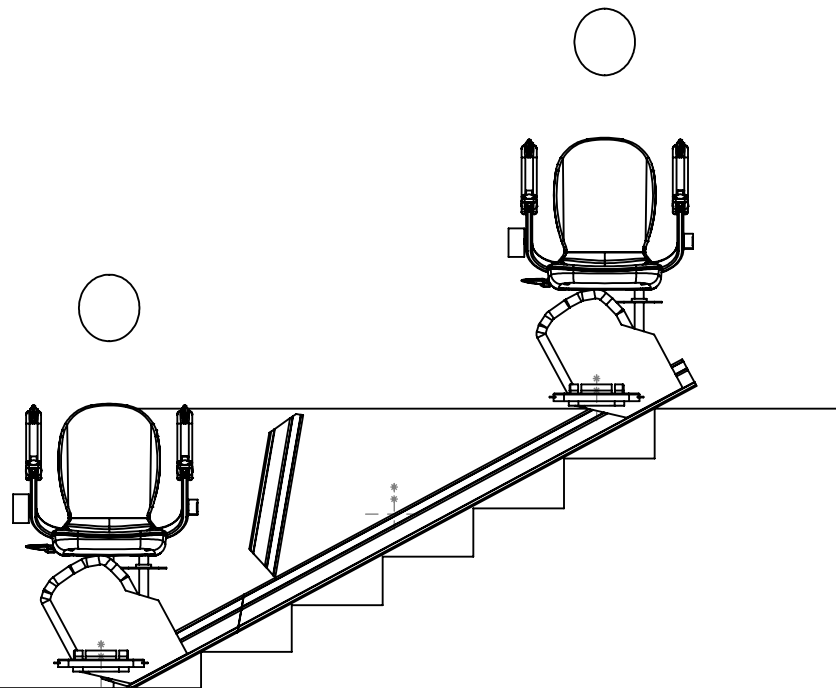





VERTITEC
REF.-Abatible

DWG. NO.

REV.

BORJA PEIRÓ SIGNES

SHEET 1 OF 1

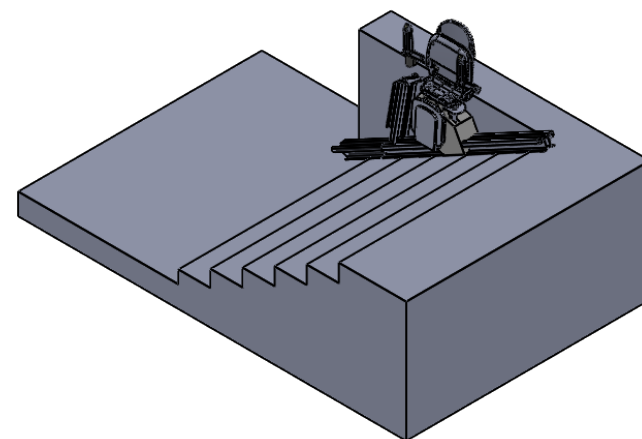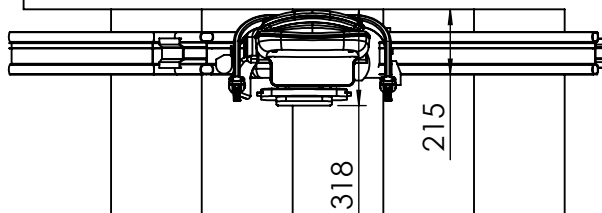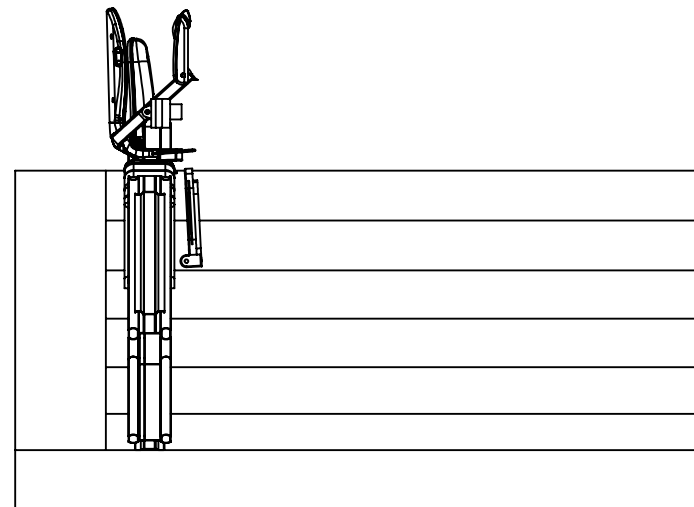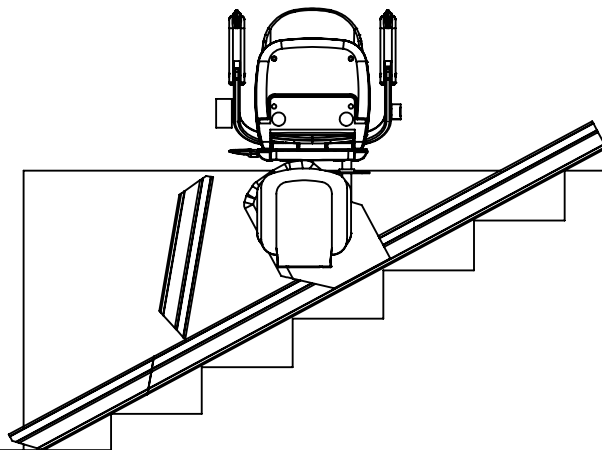

VERTITEC
REF.-Abatible plegada

DWG. NO.
OT- /18

REV.

BORJA PEIRÓ SIGNES

SHEET 1 OF 1